D SCHEDA TECNICA - DISTANZIATORE AUTOLIVELLANTE MAXI TOP

- # TECHNICAL DATA SHEET SELF LEVELLING SPACER MAXI TOP
- **FICHE TECHNIQUE ESPACEUR AUTONIVELANT, MAXI TOP**
- FICHA TÉCNICA ESPAÇADOR NIVELADOR MAXI TOP



1 Utilizzo / Application

• PRODOTTI da Gruppo Stamplast,

Semplifica la posa in opera delle piastrelle di grande formato eliminando i dislivelli e mantenendole in posizione complanare fino alla maturazione della colla. La posa in opera è ulteriormente velocizzata grazie all'utilizzo della nostra pinza.

MANUFACURED by Gruppo Stamplast, Simplifies the installation of the large format tiles, avoiding the differences in height and keeping them in aligned until the glue sets. The installation is further accelerated by the use of our pliers.



2 Modelli / Models

COD.	MOD.	©	8			⇔ ↑*	
DLIV-C01A	Cuneo Maxi	Black	100	1200	42 Cartoni	100x120x240	0,780 kg/bl
DLIV-T01A	Tir. Maxi TOP 1,0 mm	Green	100	2500	42 Cartoni	100x120x240	0,290 kg/bl
DLIV-T03	Tir. Maxi TOP 2,0 mm	O White	100	2500	42 Cartoni	100x120x240	0,320 kg/bl
DLIV-T03A	Tir. Maxi TOP 3,0 mm	Red	100	2500	42 Cartoni	100x120x240	0,330 kg/bl

*MISURE IN CM / MEASURES IN CENTIMETERS


Materiali / Materials


- Tirante in PE-HD.- Cuneo in ABS.

3 Misure / Measurements

MOD.	L**	S**	**
Cuneo Maxi	91,3	19,0	21,9
Tir. Maxi TOP 1,0 mm	39,0	21,0	1,0
Tir. Maxi TOP 2,0 mm	39,0	21,0	2,0
Tir. Maxi TOP 3,0 mm	39,0	21,0	3,0

^{**}MISURE IN MM / MEASURES IN MILLIMETERS

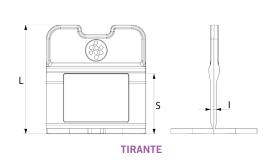

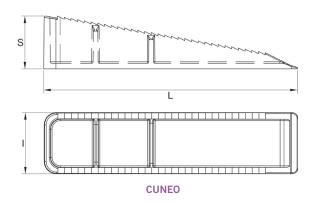





DISTRUZIONI - DISTANZIATORE AUTOLIVELLANTE MAXI TOP

- **** ASSEMBLY INSTRUCTIONS SELF LEVELLING SPACER MAXI TOP**
- INSTRUTIONS DE MONTAGE ESPACEUR AUTONIVELANT, MAXI TOP
- ISTRUCCIONES PARA EL MONTAJE ESPAÇADOR NIVELADOR MAXI TOP



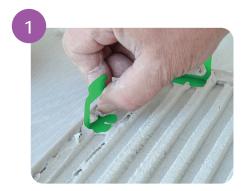

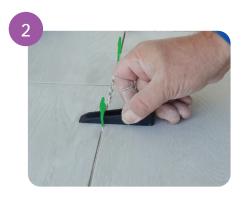



Posizionare correttamente il tirante tra le piastrelle, subito dopo inserire il cuneo nell'apposita fessura. Insert the clip between the tiles, immediately after that insert the wedge in the cleft.







Posizionare il cuneo con le mani o con l'ausilio della nostra pinza fino a che le due superfici non sono esattamente complanari.

Put the wedge with your hands or with the pliers until the surfaces are exactly coplanar.

Alla maturazione della colla provvedere alla rimozione dei cunei operando un colpo deciso sulla testa del tirante.

When the glue is dried remove the wedges hitting the clips.

TABELLA DEI CONSUMI - DISTANZIATORI PER PIASTRELLE AL M²

А	·										
10	200							Р	iastre	ella	
20	100	50									
30	100	50	44				A				В
40	75	37	33	25							
50	60	30	27	20	16		_				
60	50	25	22	17	10	11					
80	50	25	21	16	15	10	9				
90	44	22	18	14	15	9	8	7			
100	50	25	20	15	15	10	9	8	8		
120	42	21	17	13	15	8	7	6	7	6	
cm	10	20	30	40	50	60	80	90	100	120	В

